

HCI Informational Parameter Commands

OGF	OCF	Op-code			
0x04	0x0001	0x1001	V1.1	V1.2	Read_Local_Version_Information
0x04	0x0002	0x1002	—	V1.2	Read_Local_Supported_Commands
0x04	0x0003	0x1003	V1.1	V1.2	Read_Local_Supported_Features
0x04	0x0004	0x1004	—	V1.2	Read_Local_Extended_Features
0x04	0x0005	0x1005	V1.1	V1.2	Read_Buffer_Size
0x04	0x0006	0x1006			<i>not used</i>
0x04	0x0007	0x1007	V1.1	—	Read_Country_Code
0x04	0x0008	0x1008			<i>not used</i>
0x04	0x0009	0x1009	V1.1	V1.2	Read_BD_ADDR
