

HCI Status Parameter Commands

OGF	OCF	Op-code			
0x05	0x0001	0x1401	V1.1	V1.2	Read_Failed_Contact_Counter
0x05	0x0002	0x1402	V1.1	V1.2	Reset_Failed_Contact_Counter
0x05	0x0003	0x1403	V1.1	V1.2	Get_Link_Quality
0x05	0x0004	0x1404			<i>not used</i>
0x05	0x0005	0x1405	V1.1	V1.2	Read_RSSI
0x05	0x0006	0x1406	—	V1.2	Read_AFH_Channel_Map
0x05	0x0007	0x1407	—	V1.2	Read_Clock
