

HCI Testing Commands

OGF	OCF	Op-code			
0x06	0x0001	0x1801	V1.1	V1.2	Read_Loopback_Mode
0x06	0x0002	0x1802	V1.1	V1.2	Write_Loopback_Mode
0x06	0x0003	0x1803	V1.1	V1.2	Enable_Device_Under_Test_Mode

Last updated 21st May 2004, Peter Dziwior.